


## 取扱説明書 OPERATION MANUAL

本製品はPGストレートコレットにご使用ください。スプリングの代わりにシールブッシュを使用することで、刃先からの給油が可能になります。


### ご使用方法

あらかじめ、ジョイントスクリュー両側のねじ部にシールテープを巻いてください。




#### ●CPG10SB

下図のように先にシールブッシュをPGストレートコレットの後部側から挿入した後、ジョイントスクリューをPGストレートコレットの端面に当たる位置まで締め付けてください。コレットをホルダに取り付ける際は、ホルダのインターフェイス側からジョイントスクリューを反時計回りに回転させ、コレットのツバ部端面がホルダ本体の口元に軽く接触するまで引き込んでください。コレットおよびシールブッシュをホルダ本体から取り外す場合は、取り付けの逆の手順で作業を行ってください。




#### ●CPG12SB, CPG16SB

スプリングの代わりにシールブッシュを使用し、PGストレートコレットの取扱説明書に従ってご使用ください。

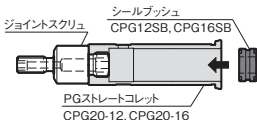

### ご注意


フランジスルーでの給油には対応していません。



Seal Bush must be used with the PG Straight Collet. Coolant-through-tool becomes available by replacing the Spring with the Seal Bush.


## HOW TO USE

Apply sealing tape to threads at both ends of the Joint Screw.




### ●CPG10SB

As shown below, insert the Seal Bush from the back of the PG Straight Collet. Tighten the Joint Screw until it contacts with the end face of the PG Straight Collet. When mounting the assembled PG Straight Collet into a toolholder, insert an allen key from the back of the toolholder, rotate the Joint Screw anticlockwise and draw the PG Straight Collet into the toolholder until the front flange of the PG Straight Collet lightly contacts with the front end of the toolholder. When removing the assembled PG Straight Collet from the toolholder, take a reverse procedure.



### ●CPG12SB,CPG16SB

Seal Bush must be used instead of the Spring. Except for that, follow the operation manual for the PG Straight Collet.



### CAUTION

Seal Bush is not designed for coolant through the flange.



Coolant



### OPERATION MANUAL DOWNLOAD SITE

[https://big-daishowa.com/  
manual\\_index.php](https://big-daishowa.com/manual_index.php)



大昭和精機株式会社

本社 / TEL.072-982-2312

No.0624